 
 
 


# Moulinex

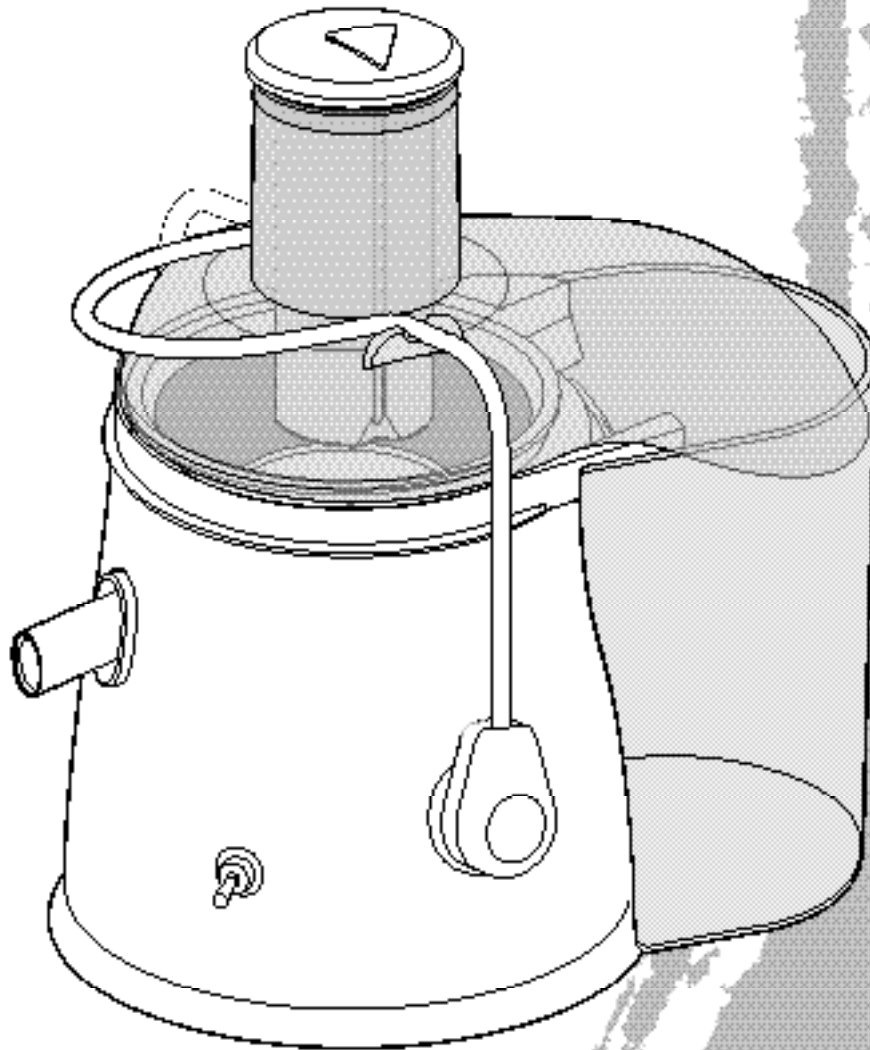

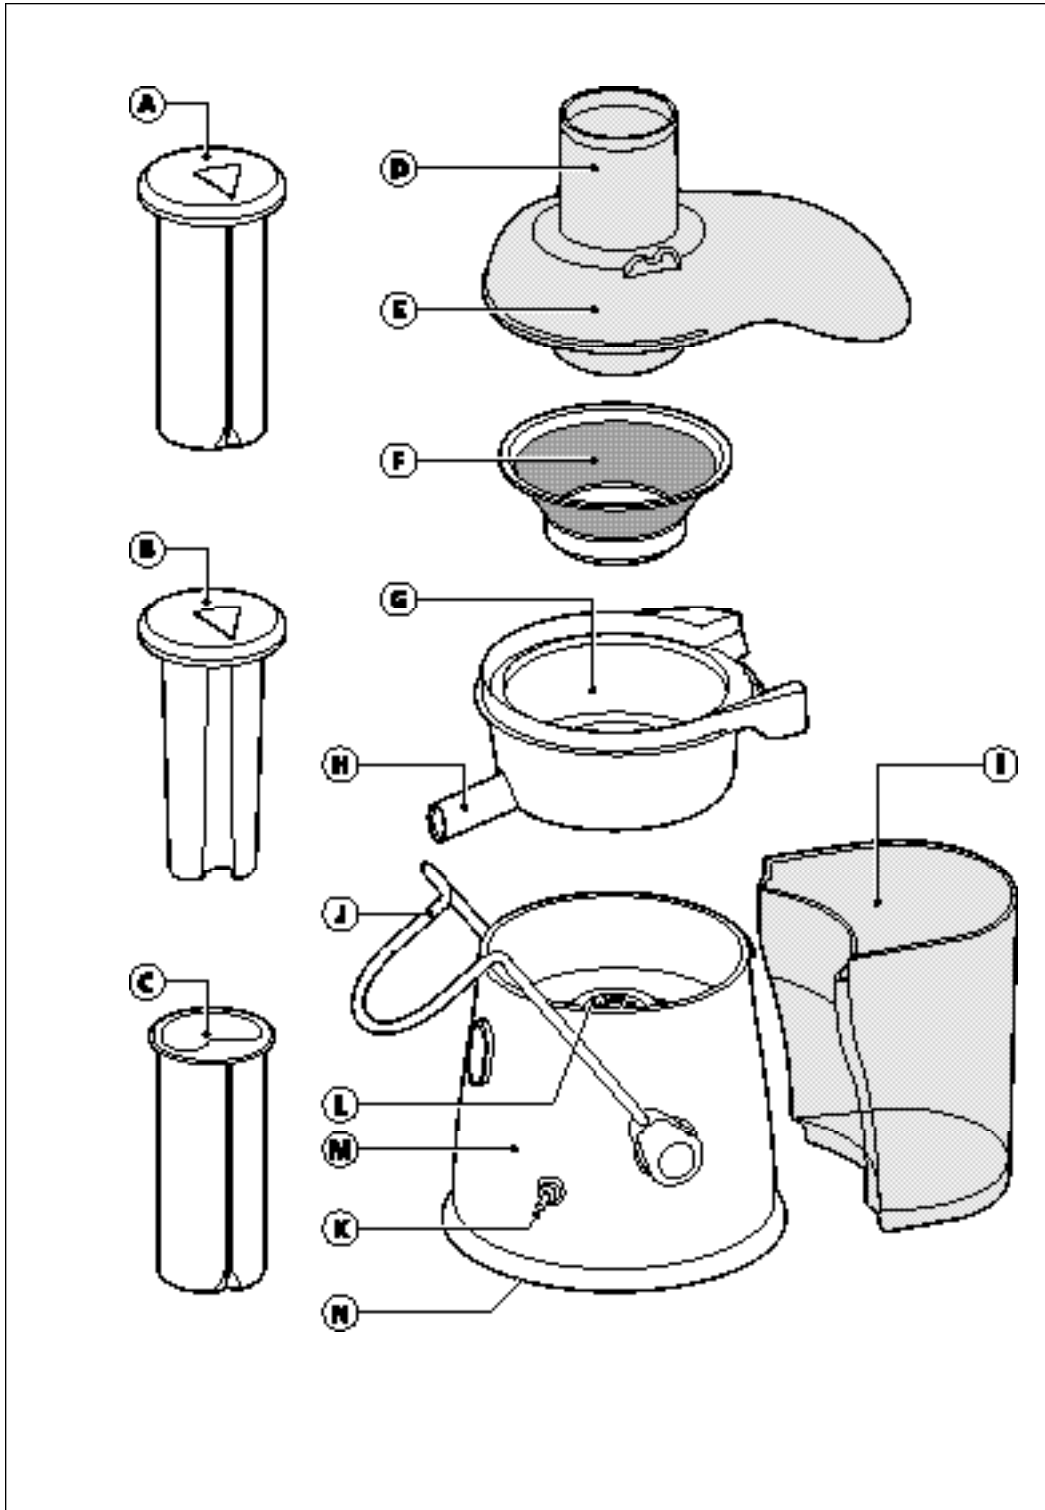




Thank you for showing confidence in our product range. Please read these instructions carefully.

## SAFETY SYSTEM

This appliance is fitted with two safety mechanisms. To start the juice machine, the pulp collector **(I)** must be correctly in position and the cover **(E)** must be properly secured by the clamp **(J)**. Opening the clamp **(J)** or removing the pulp collector **(I)** will stop the juice machine. At the end of a cycle, place the switch **(K)** in the "0" position and wait until the sieve stops completely before removing the cover.

## SAFETY INSTRUCTIONS

- **Always check the sieve (F) before use.**
- Never use the juice machine if the sieve is broken or damaged or if there is visible cracking or crazing or the sieve is torn. If there is any evident damage to the sieve, contact an Approved Service Centre. Handle the sieve with care (sharp edges).
- For your safety, this appliance is compliant with applicable standards and regulations:
  - \* Low Voltage Directive
  - \* Electromagnetic Compatibility Directive
  - \* Regulations governing materials in contact with food
  - \* Environment: Plastics Directive, 2002/95/EC
- Check that the supply voltage shown on the rating plate of the appliance matches that of your electrical system. Any connection error will invalidate the guarantee.
- Never place or use this appliance on a hotplate or near an open flame (gas cooker).
- Do not immerse the motor unit or put it under running water.
- If the supply cord is damaged, it must be replaced by the manufacturer, an approved after-sales service or a similarly qualified person, in order to avoid any danger.
- Always use this product on a solid, stable work surface that is not subject to water splashes. Do not turn it over.
- Never dismantle your appliance. Apart from the usual care and cleaning, the appliance requires no maintenance on your part.
- The juice machine must be unplugged:
  - \* if there is a problem or fault during operation,
  - \* before assembly, disassembly or cleaning,
- Never pull on the supply cord to unplug the appliance.
- Only use an extension after checking that it is perfect condition.
- A domestic appliance must not be used:
  - \* if it has fallen on the floor,
  - \* if it is damaged or incomplete.
- In such a case, or for any other repair YOU MUST contact an Approved Service Centre.
- This product has been designed for domestic use only. Any commercial use, inappropriate use or failure to comply with the instructions, the manufacturer accepts no responsibility and the guarantee will not apply.
- This appliance is not designed to be used by persons (including children) of reduced physical, sensorial or mental capacity or persons with no experience or knowledge, unless they are instructed and supervised in
- The use of the appliance by a person responsible for their safety.
- Young children must be supervised to ensure that they do not play with the appliance.
- Only use original accessories and components. We cannot accept any responsibility if this is not the case.
- Never put your fingers or any other object in the filler tube while the appliance is in operation. Always use the pusher provided for the purpose.
- Never open cover before the sieve **(F)** has ceased rotating.
- Do not remove the pulp collector **(I)** while the appliance is running.
- Always unplug the appliance after use.

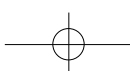

## DESCRIPTION OF THE APPLIANCE


<b>A</b>	Large pusher	<b>I</b>	Pulp collector
<b>B</b>	Small pusher	<b>J</b>	Clamp
<b>C</b>	Reducer for small pusher	<b>K</b>	Switch
<b>D</b>	Feed tube	<b>L</b>	Drive shaft
<b>E</b>	Cover	<b>M</b>	Motor unit
<b>F</b>	Sieve	<b>N</b>	Cord-tidy
<b>G</b>	Juice collector	<b>O</b>	Brush
<b>H</b>	Pouring spout		

## BEFORE USE


We recommend that you wash the **removable parts (parts A, B, C, E, F, G & I)** after unpacking the appliance (see chapter CLEANING AND CARE).

Unpack the appliance and then place it on a solid, stable work surface, slip back the clamp (**J**), remove the reducer for the small pusher (**C**), the cover (**E**), **take out the protective card on the sieve (F)** then remove the sieve (**F**) and the juice collector (**G**).


## STARTING

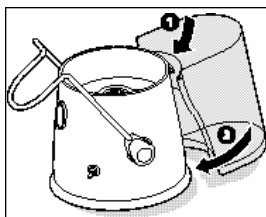


Fit the pulp collector (**I**) on the rear of the appliance, tipping it forward slightly to slide the collector **under the safety device**.

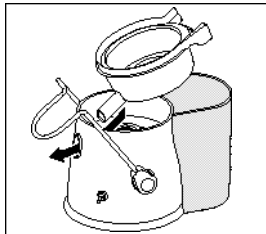


Fit the juice collector (**G**) in the appliance, tipping it slightly forward to pass the pouring spout (**H**) through the hole provided.

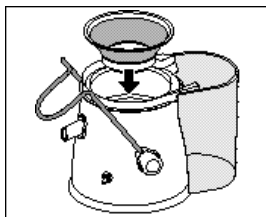

Place the sieve (**F**) in the juice collector (**G**). Ensure that the sieve is correctly clipped onto the drive shaft (**L**) (**audible click**).

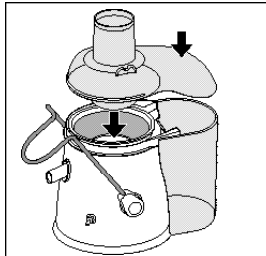

Fit the cover on the juice collector (**E**) on the juice collector (**G**), ejection spout to the rear.

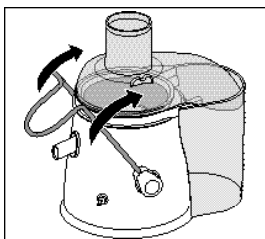

Click the clamp **(J)** into place over the cover **(E)**.

Position a glass or other receptacle under the pouring spout **(H)** in front of the appliance.

Plug in the appliance: You can use the cord-tidy **(N)** to adjust the length of the cord.

### Which pusher to use?

Ingredients	Recommended pusher A (large pusher) B (small pusher) + C (reducer for small pusher)	Approx. weight (in kg)	Quantity of juice obtained in cl (*) 1 glass = 200ml (approximately)
Apples	A	1	65
Pears	A	1	60
Carrots	B + C	1	60
Cucumbers	B + C	1 (about 2 cucumbers)	60
Pineapple	B + C	1	30
Grapes	B + C	1	45
Tomatoes	A	1.5	90
Celery	B + C	1.5	95
<b>Choosing the wrong pusher may cause the appliance to vibrate abnormally.</b>			

(\*) The quality and quantity of juice varies greatly according to the date of harvest and the particular variety of fruit or vegetable. The quantities of juice indicated above are therefore approximate.

- Never use the small pusher **(B)** without its reducer **(C)**.
- Slide the reducer **(C)** into the feed tube **(D)**, aligning the groove in the reducer with the small ridge in the feed tube then lock it in the direction indicated.
- Start the appliance using the switch **(K)**:
- Insert the fruit or vegetables through the feed tube **(D)**.
- **The fruit and vegetables must be inserted while the motor is running.**
- Do not press too hard on the pusher. Do not use any other utensil. **NEVER** push with the fingers.
- When you have finished, stop the appliance, using the switch **(K)** and **wait for the sieve (F) to stop completely.**
- When the pulp collector **(I)** is full, or the flow of juice slows, empty the collector and clean the sieve **(F)**.

## USEFUL ADVICE


- Wash the fruit carefully before stoning.
- You do not need to remove the skin or peel. You only need to peel fruit with thick (and bitter) skin: citrus fruit, pineapple (remove the centre stalk).
- Certain types of apples, pears, tomatoes etc. will fit in the feed tube whole, thanks to the "Direct Fruit System" (74 mm maximum diameter), so choose the appropriate type of fruit or vegetable.
- It is difficult to extract juice from bananas, avocados, blackberries, figs, aubergines and strawberries.
- The juice machine should not be used for sugar cane and excessively hard or fibrous fruit.
- Choose fresh, ripe fruit and vegetables, they will yield more juice. This appliance is suitable for such fruit as apples, pears, oranges, grapes, pomegranates and pineapple and such vegetables as carrots, cucumbers, tomatoes, beetroot and celery.
- If you centrifuge over-ripe fruit, the basket will be blocked more quickly.
- **Important:** All juice must be consumed immediately. On contact with air, it is very quickly oxidised, which can change taste, colour and, above all, nutritional value. Apple and pear juices quickly turn brown. Add a few drops of lemon juice to slow this discoloration.

## CLEANING AND CARE

- All removable parts may be cleaned in the dishwasher.
- **This appliance is easier to clean immediately after use.**
- Do not use scouring pads, acetone, alcohol (spirit) etc. to clean the appliance.
- The sieve must be handled with care. Avoid any mishandling that may damage it. Change your sieve at the first sign of wear or damage.
- Clean the motor unit with a damp cloth.
- The sieve (**F**) can be cleaned with the aid of the brush (**O**).

## WHAT TO DO IF YOUR APPLIANCE DOES NOT WORK?

PROBLEM	CAUSES	SOLUTIONS
The appliance does not work.	The plug is not inserted correctly: The switch is not at "1"	Connect the appliance to a socket with the correct voltage. Operate the switch
	The pulp collector ( <b>I</b> ) is not correctly fitted	Check the fitting of the pulp collector ( <b>I</b> )
	The cover ( <b>E</b> ) is not properly clamped	Check that the cover ( <b>E</b> ) is properly fitted and clamped
The appliance is giving off a smell or is very hot to the touch, is smoking or making an abnormal noise	The sieve ( <b>F</b> ) is not correctly fitted	Check the fitting of the sieve ( <b>F</b> )
	The quantity of food being processed is too great	Leave the appliance to cool and reduce the quantity to be processed

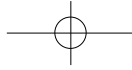

## HELPLINE:

If you have any product problems or queries, please contact our Customer Relations Team first for expert help and advice:



0845 602 1454 - UK  
(01) 461 0390 - Ireland

or consult our website - [www.moulinex.co.uk](http://www.moulinex.co.uk)

## ELECTRICAL AND ELECTRONIC PRODUCTS AT END OF LIFE



### Environment protection first !

-  Your appliance contains valuable materials which can be recovered or recycled.
-  Leave it at a local civic waste collection point.

