


Please read these instructions carefully and keep for future reference.

Description

- A. Spray nozzle (depending on the model)
- B. Water tank filling inlet with cover
- C. Steam control button (with self-clean function )
- D. Spray button (depending on the model)
- E. Shot of steam button (depending on the model)
- F. Electric power cord support
- G. Thermostat indicator light
- H. Thermostat control dial
- I. Water tank maximum fill line.
- J. Soleplate

Warning ! remove the soleplate protector before heating up the iron

Warning ! before using your iron with the steam function for the first time, we recommend that you operate it in a horizontal position for a few moments, away from your linen, ie press several times on the shot of steam button.

What water to use ?

Your appliance has been designed to function with untreated tap water. However, it is necessary to operate the Self-Clean function regularly in order to eliminate hard water deposits. If your water is very hard (check with your water authority), it is possible to mix untreated tap water with store-bought demineralised water in the following proportions : 50% untreated tap water, 50% demineralised water.

Types of water not to use ?

Heat concentrates the elements contained in water during evaporation. Types of water listed below contain organic waste or mineral elements that can cause spitting, brown staining, or premature wear of the appliance : water from clothes dryers, scented or softened water, water from refrigerators, batteries, air conditioners, pure distilled water, pure demineralised water or rain water, boiled water, filtered or bottled mineral water. All of these should not be used.

1. Safety instructions

- Read the instructions for use carefully before using your appliance for the first time and keep them : any use which does not conform to the instructions for use will absolve Moulinex from any liability.

- Do not leave the appliance within reach of children unsupervised. The use of this appliance by children or by disabled persons must be supervised at all times.

- Check that the specifications of your appliance are compatible with those of your electrical system.

- This appliance must be connected to an earthed socket.

Any connection error will invalidate the guarantee.

- This appliance is intended solely for domestic and indoor use.

- The appliance must not be used if it has fallen, if there is any obvious damage, if there are any leaks or functional anomalies. Never dismantle your appliance: to avoid any danger, take it for inspection to an approved service centre

- Do not use the appliance if it is not working properly or if it has been damaged. Any intervention apart from cleaning and normal maintenance by the customer must be carried out by an approved Moulinex service centre (see list in the service booklet).

- Do not place the appliance, the power cord or the plug in water or in any other liquid.

- Do not allow the power cord to hang down within reach of children.

- Place the appliance on a flat, stable, heat-resistant surface away from water splashes.

- When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.

- The power cord must never be close to or in contact with the hot parts of your appliance, close to a source of heat, or resting on a sharp edge.

- If the power cord or the plug are damaged do not use the appliance. To avoid any risk these must be replaced by an approved Moulinex service centre (see list in the service booklet).

- For your own safety, use only the accessories and spare parts from Moulinex which are suitable for your appliance.

- The iron is fitted with a thermal safety device which cuts off the power if anything goes wrong.

- Never leave the iron unsupervised when it is plugged in.

- Unplug the iron :

. before filling the tank

. when you have finished ironing and for any maintenance.

- Do not unplug the appliance by pulling on the power cord.

- Allow the iron to cool down before putting it away.

If you have any problems or queries please call our Customer Relations Team first for expert help and advice :

HELPLINE

0845 602 1454 - UK

(01) 47 51947 - IRELAND

or visit our website : www.moulinex.co.uk

2. Steam ironing

• FILLING THE WATER TANK :

- Unplug your iron before filling it.
- Set the steam control on DRY (1) (☞)
- Fill the beaker
- Open the water tank cover completely (2), set the iron on a flat, stable surface (not when the iron is hot) shown in the diagram (3) and fill the tank.
- Do not exceed the "MAX" line indicated on the water tank (with the iron set on its heel).
- Close the water tank cover.

• SETTING THE TEMPERATURE

- Set the temperature control shown in the diagram (4) referring to the table below.

The thermostat light comes on. Wait for the light to go off and come on again before your start ironing (5).

FABRICS	POSITION OF THERMOSTAT DIAL
LINEN	MAX
COTTON	•••
WOOL	••
SILK	•
SYNTHETIC Polyester, Acetate, Acrylic, Nylon	•

• SETTING THE STEAM LEVEL (6)

In order to avoid water dripping from the iron onto the linen :

- Turn off the steam when ironing silk or synthetic fabrics.
- Set it at the « low steam » (☞) position for wool.
- Set it at the « high steam » (☞) position for cotton or linen.

FABRICS	STEAM SETTING POSITION
LINEN	☞
COTTON	☞
WOOL	☞
SILK	☞
SYNTHETIC Polyester, Acetate, Acrylic, Nylon	☞

☞ = Steam zone

Recommendations :

Fabrics and ironing temperatures :

- **Your iron heats up quickly : begin by ironing those fabrics that are ironed at low temperatures, then go on to those requiring a higher temperature;**
- **If you turn down the thermostat, wait until the thermostat light comes back on before beginning to iron again.**
- **When ironing fabrics with mixed fibres, set the ironing temperature for the most delicate of the fibres.**

• DAMPENING THE LINEN (SPRAY) (☞) (depending on the model)

- When steam or dry ironing, press several times on the Spray Button to moisten the linen (7) and to remove stubborn creases.
- Make sure that there is water in the tank before using this button.

• OBTAINING MORE STEAM FOR REMOVING CREASES (☞) (depending on the model)

- Press the Shot of steam button (8)
- Wait a few seconds between each shot before pressing the button again.

3. Dry ironing (☞)

- Set the temperature.
- Set the steam control on DRY (1).
- You may start ironing when the thermostat light goes out and comes on again.

4. Maintaining your iron

BE CAREFUL!

Unplug your iron and let it cool off before cleaning it.

• CLEAN THE ANTI-CALC VALVE, LOCATED UNDER THE STEAM CONTROL BUTTON (C). (Once per month)

- Unplug your iron and empty the water tank.
- To remove the anti-calc valve, place the steam control button (C) on ☞ and pull the valve upwards.
- Never touch the end of the valve.
- Soak the valve in a cup of white vinegar or plain lemon juice for 4 hours.
- Rinse the valve under running water.
- Replace the anti-calc valve.
- The iron will not function without the anti-calc valve.

• USING THE SELF-CLEANING FUNCTION

In order to extend the life of your iron, use the Self-Cleaning function once per month (do not use descaling agents).

- The iron must be cold
 - Set the steam control button (C) to the dry position.
 - Fill the tank up to the maximum level and set the thermostat control dial (9) to MAX
 - Plug in the iron
- As soon as the temperature control indicator light goes out, unplug the iron and hold it over the sink.
- Turn the steam control button (C) to position "Self-Clean" (☞)

- Hold the iron over the sink for 15 seconds.

The mixture of water / steam will take with it any residues of scale contained in the soleplate.

- Re-set the steam control button (C) to the dry position
- Using slow, deliberate movements, tilt the iron from left to right in order to rinse the soleplate thoroughly and to get rid of the remaining water.
- Empty the tank
- Plug in the iron again to dry the soleplate, which should be done over a cloth (watch out for any splashes of water and steam).
- After this operation, unplug the iron again and allow it to cool before cleaning the soleplate.
- Clean the soleplate (cold iron) with a piece of thick, clean, damp cotton before putting away the iron or before using it again.

Recommendation :

The self-cleaning function helps to delay the scaling of your iron

• **CLEANING THE SOLEPLATE**

- Do not scratch or scrape the soleplate. Do not use strong or abrasive detergents for cleaning.
- Clean the soleplate (cold iron) on a piece of thick, clean, damp cotton before putting away the iron.

5. Storing your iron

- Unplug it and wait until the soleplate has cooled down.
- Empty the water tank and set the steam control on DRY.
- Store the iron on its heel.

6. Is there a problem ?

Problems and possible causes	Solutions
<p>Water drips from the holes in the soleplate</p> <ul style="list-style-type: none"> • The chosen temperature is too low and does not allow the formation of steam. • You are using steam while the iron is not hot enough. • You are using the Shot of Steam button too often. • The steam flow is too high • You have stored the iron horizontally, without emptying it and without setting it to DRY 	<ul style="list-style-type: none"> • Set the thermostat in the coloured zone (from ●● to MAX) • Wait until the thermostat light goes out. • Wait a few seconds between each use of the button. • Reduce the steam flow. • See the section “Storing your iron”.
<p>Brown streaks come through the holes in the soleplate and stain the linen</p> <ul style="list-style-type: none"> • You are using chemical descaling agents. • You are using the wrong type of water. • Fabric fibres have accumulated in the holes of the soleplate and are burning • Your linen is not rinsed sufficiently or you have ironed a new garment before washing it. 	<ul style="list-style-type: none"> • Do not add any descaling agents to the water in the water tank. • Do a self-cleaning and use untreated tap water (see p8). • Do a self-cleaning. • Clean the soleplate with a non-metallic sponge. • Vacuum the holes of the soleplate from time to time. • Wash and rinse clothes thoroughly before ironing.

Problems and possible causes	Solutions
<p>The soleplate is dirty or brown and can stain the linen</p> <ul style="list-style-type: none"> • You are using too high a temperature • You are using starch 	<ul style="list-style-type: none"> • Clean the soleplate as indicated above. See the temperature table to correctly set the thermostat. • Always spray starch onto the reverse side of the fabric to be ironed.
<p>There is little or no steam</p> <ul style="list-style-type: none"> • The water tank is empty • Your iron has a build-up of scale • Your iron has been used dry for too long. 	<ul style="list-style-type: none"> • Fill it with tap water. • Do a self-cleaning. • Do a self-cleaning.
<p>The soleplate is scratched or damaged</p> <ul style="list-style-type: none"> • You have placed your iron flat on a metallic rest-plate 	<ul style="list-style-type: none"> • Always set your iron on its heel • Avoid ironing over zips

This product has been designed for domestic use only. Any professional use, inappropriate use or failure to comply with the instructions, the manufacturer accepts no responsibility and the guarantee will not apply.

If you have any problems or queries please call our Customer Relations Team first for expert help and advice :
HELPLINE
 0845 602 1454 - UK
 (01) 47 51947 - IRELAND
 or visit our website : www.moulinex.co.uk